




Kit Contents

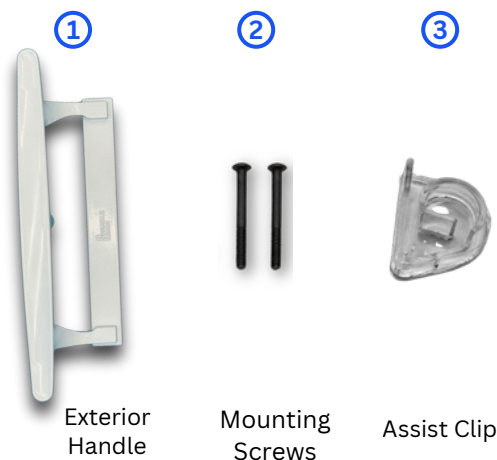

Tools Required



Medium #2
Phillips Screwdriver

Note: Right interior side shown & illustrated throughout instructions. Instructions are the same for Left side installation just mirror.



IMPORTANT: Be sure to first check contents of kit to be sure you have everything per the content list. Should you have any questions or concerns with installation please feel free to reach out to us for assistance at 941-875-8932 or info@handleman.net

1 Prepare the Door for Installation

(Install the Assist Clip & Remove Existing Mounting Screws)

1. Snap the Assist Clip (Item ③) securely over the edge of the door and around the lock area, as shown in Diagrams 1a and 1b.
2. From the interior side of the door, remove the two existing mounting screws identified as "A" in Diagrams 1a and 1b.
3. The original mounting screws will not be reused during the installation of your new Handle-Man FullGrip™ Handle and may be discarded.

Important:

- The Assist Clip is designed to support the existing lock mechanism and recessed exterior handle during removal of the mounting screws, helping maintain proper alignment of components while the assembly is loosened.
- If the existing interior handle will be reused, support it during screw removal to prevent it from falling and becoming damaged.
- The manufacturer's interior lock mechanism remains inside the door and **does not need to be removed** for installation of the new FullGrip™ Handle.

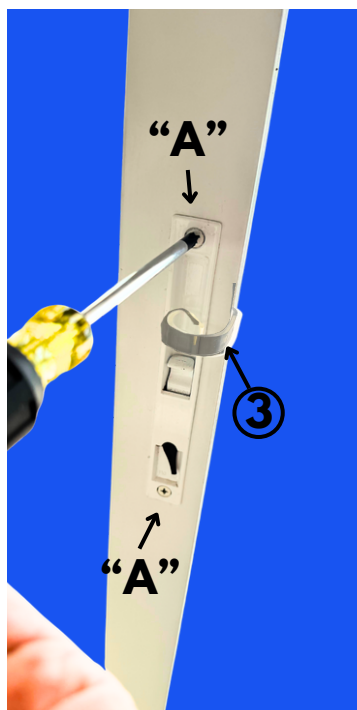


Diagram 1a

(Without Existing Interior Handle)



Diagram 1b

(With Existing Interior Handle)

2 Remove the Existing Exterior Finger Groove Handle

1. Carefully remove the Assist Clip (Item ③) from the door and set it aside. It will be reused in a later step.
2. Remove the existing exterior recessed finger groove handle identified as "B" in Diagram 2.
3. Once removed, the exterior recessed handle may be discarded, as it will not be reused during installation of the new Handle-Man FullGrip™ Handle.

Important:

- Take care not to scratch or damage the door surface during removal of the exterior recessed handle.
- If the handle is sealed with paint, caulk, or adhesive, carefully break the seal before removal to avoid damaging the door surface.
- After removal, inspect the mounting area and remove any remaining debris, old sealant, or adhesive residue to ensure the new FullGrip™ Handle seats properly and flush against the door.

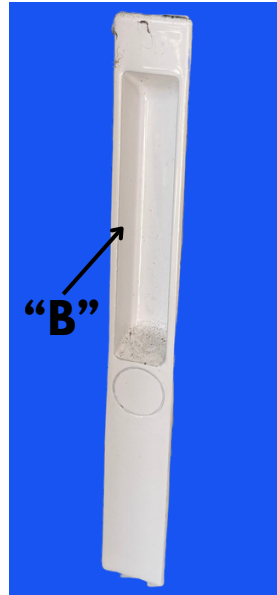


Diagram 2

3 Position the New Handle-Man FullGrip™ Handle

1. From the exterior side of the door, position the new Handle-Man FullGrip™ Handle (Item ①) into the existing door cutout, as shown in Diagram 3.
2. Carefully guide the handle (Item ①) into place until it is fully seated and flush against the exterior surface of the door.
3. Once the Handle-Man FullGrip™ Handle is properly positioned, reinstall the Assist Clip (Item ③) over the edge of the door to temporarily secure the Handle-Man FullGrip™ Handle assembly in place for the final installation step.

Important:

- Verify that the handle assembly is fully seated and properly aligned before installing the Assist Clip.
- The Assist Clip is designed to temporarily hold the Handle-Man FullGrip™ Handle in position, allowing for easier alignment and installation of the interior mounting hardware during final assembly.

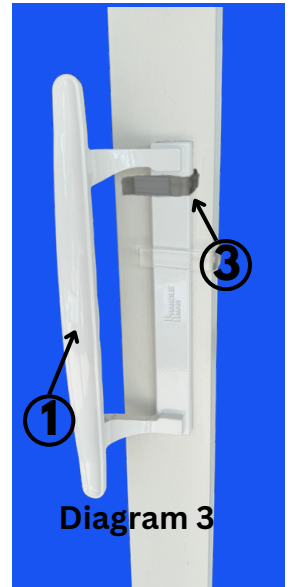


Diagram 3

4 Final Assembly

1. With the Assist Clip (Item ③) holding the Handle-Man FullGrip™ Exterior Handle (Item ①) and the interior lock assembly securely in position, install the interior handle (reuse existing handle if applicable or install new handle if included), as shown in Diagrams 4a and 4b.
2. Align all mounting holes and insert the two Mounting Screws (Item ②) from the interior side of the door and thread them into the FullGrip™ Exterior Handle.
3. Using the screwdriver, tighten both screws evenly until the interior and exterior handle assemblies are securely fastened and sit flush against the door surface.
4. Once the assembly is fully secured, remove and discard the Assist Clip (Item ③).

Important:

- Do not overtighten the Mounting Screws. Tighten only until the handle assembly is secure and properly seated against the door.
- Maintain proper alignment of both interior and exterior assemblies while tightening.

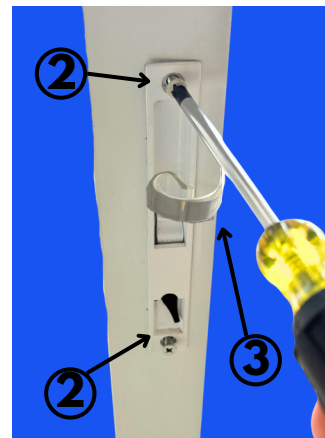


Diagram 4a



Diagram 4b

5 Final Inspection & Operation Test

1. Operate the handle and lock mechanism several times to confirm smooth and consistent operation.
2. Verify that the handle is secured, the lock engages properly, and all functions operate without resistance.
3. Perform a final visual check to ensure the handle assembly remains properly aligned and seated against the door.

TROUBLE SHOOTING TIPS

Concern	Solution
Mounting Screws won't begin to tighten.	Move the inside or the outside halves up and down to better align for screws to start threading.
The Screws included in the kit are either too long or not long enough.	Consult company.

For All other concerns reach out to us at 941-875-8932 or info@handleman.net

Congratulations! Your new Handle-Man FullGrip™ Handle has been successfully installed. Enjoy the improved comfort, control, and durability of your new handle.